



ECONO ROLLER MILLS

ADJUSTMENT SHEET

End view of Econo Roller Mill Opposite Motor

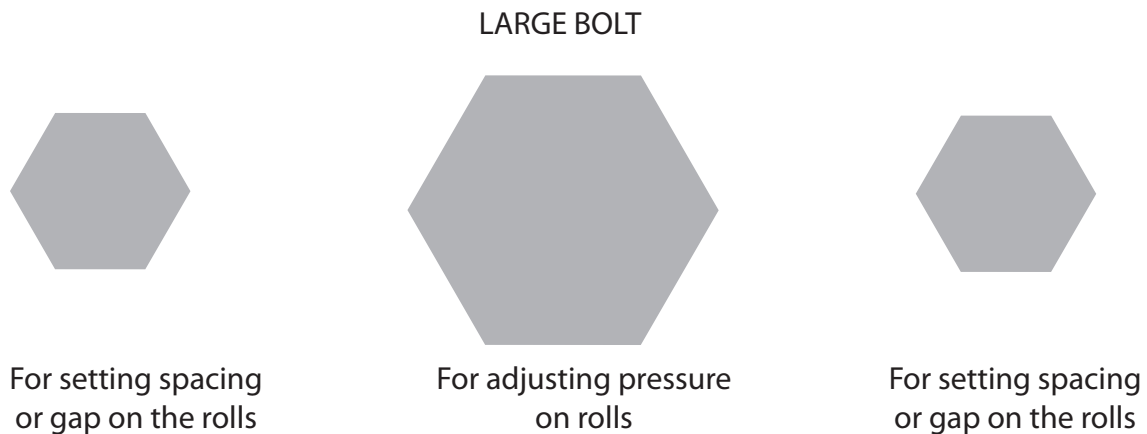

- To increase Gap screw setting bolts in (clockwise)
- To decrease Gap screw setting bolts out (counter clockwise)
- The smaller the Gap the more the grain is broken

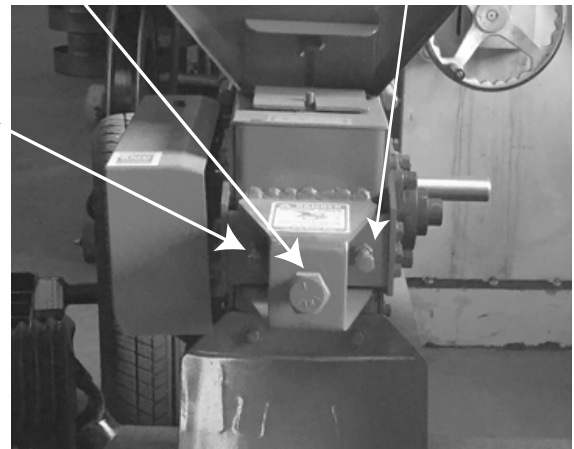

DRIVE BELT ADJUSTMENT

To Tighten Belt:

1. At the front of the mill on the left is an idler pulley with a bearing in its centre.
2. Loosen two allen head screws on housing attached to the idler pulley.
3. There are two flat spots machined on the shaft attached to the pulley.
4. Using a wrench on the flat spots tighten belt clockwise.
5. Tighten set screws again.

ECONO COMPONENTS

